

Beta Three

Meline **S2**Series

Professional Active Performance System

User Manual



[8]

SAFETY INSTRUCTIONS

PLEASE READ THIS MANUAL FIRST

Thank you for a buying $oldsymbol{eta}_3$ product. Read this manual first as it will help you operate the system properly. Please keep this manual for future reference.

 $m{\mathbb{A}}$ WARNING: This product must be installed by professionals. When using hanging brackets or rigging other than those supplied with the product, please ensure they comply with the local safety codes.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



ATTENTION : POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE (OU L'ARRIÈRE). IL NE SE TROUVE À L'INTÉRIEUR AUCUNE PIÈCE POUVANT ÊTRE RÉPARÉE PAR L'USAGER. S'ADRESSER À UN RÉPARATEUR COMPÉTENT.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

 $m{\mathbb{A}}$ ATTENTION: Don't refit the system or spare parts without being authorized as this will void the warranty.

A WARNING: Don't place naked flames (such as candles) close to the equipment.

- 1. Read the instruction manual first before using this product.
- 2. Please keep this manual for future reference
- 3. Pay attention to all warnings.
- 4. Obey all operating instructions.
- **5.** Do not expose this product to rain or moisture.
- 6. Clean this equipment with a dry cloth.
- 7. Do not block any ventilation openings. Install according to manufacturer's instructions.
- 8. Do not install this product near any heat source, such as a, heater, burner, or any other equipment with heat radiation .
- **9.** Only use spare parts supplied by the manufacturer.
- **10.** Pay attention to the safety symbol on the outside of the cover.



CONTENT

INTRODUCTION ————————————————————————————————————	— 3
Features —	— 3
Description —	<u> </u>
Applications ————————————————————————————————————	— 3
AMPLIFIER MODULE	— 4
Amplifier Module	— 4
INSTALLATION	<u> </u>
Mounting Accessories	— 5
Installation Reference	— 5
TECHNICAL SPECIFICATION	 6
Technical Sheet	<u> </u>
Frequency Response Curve and THD Curve ————————————————————————————————————	— 6
2D Dimension	 7

Meline S2

Professional Active Performance System

Features

- Compact,portable and eye catching design.
- System is 1.8M high to deliver full,natural sound.
- 12 × 2.75"full range and 2 × 25mm Silk dome tweeter vertical column speakers to ensure smooth sound coverage.
- Bi-amp module including DSP.
- Exclusive CLIK together connections,no cables required.
- Handle on back of subwoofer.
- Carry bags for system, ease of transportation.

Description

3[®] Meline S2 is a performance sound reinforcement system designed for musicians, meeting room presentation, DJ's etc for an audience up to 300. The three piece system is designed for quick and easy setup with new click together interconnecting speakers. The amplifier module is housed within the subwoofer. This bi-amp module includes DSP to enable superior performance.

The active 3-way column speaker system Meline S2 can be used for various PA applications. The individual components of the Meline S2(1 subwoofer module,2 column modules) can be connected so that the Meline S2 is also ideally suited for mobile applications. Two class D amplifiers, each with a power of 400W RMS, are available for the low-frequency and the mid-high frequency ranges.

Two audio units and two microphones can be connected to the 4-channel mixer unit. For sound adjustment and frequency splitting, the audio signals pass a digital signal processor (DSP) that also includes a signal limiter.


Applications


- Church
- Auditorium
- Conference room
- Small performance
- Multifunctional hall





Amplifier Module

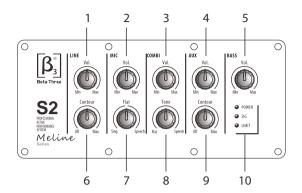

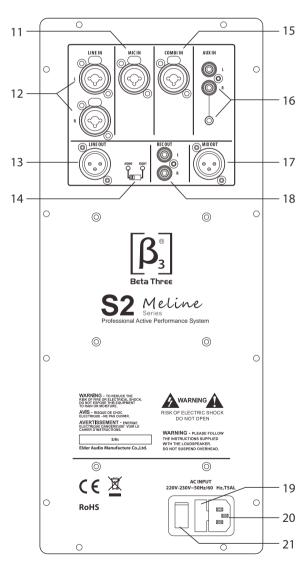

- 1. Volume control for the input LINE IN(12)
- 2. Volume control for the input MIC IN(11)
- 3. Volume control for the input COMBI IN(15)
- 4. Volume control for the input AUX IN(16)
- Control to adjust the strength of the low frequencies radiated by the subwoofer
- 6. Control CONTOUR to define the level of the aurally compensated sound correction for the input LINE IN(12)
- 7. Equalizer control for the signal of the input MIC IN(11), continuously adjustable between vocals(SING), neutral (FLAT) and speech
- 8. Equalizer control for the signal of the input COMBI IN(15), continuously adjustable between neutral(FLAT), music (TONE) and speech
- 9. Control CONTOUR to define the level of the aurally compensated sound correction for the input AUX IN(16)
- 10. LED indicators

POWER = Power indicator

SIG = Signal indicator

LIMIT = Limiter indicator:Lights up when the signal level is too high;the limiter will reduce the signal level to protect the speaker.

- 11. Input MIC IN(combined 6.3mm jack/XLR,bal.)to connect a microphone
- 12. Stereo input LINE IN(combined 6.3mm jacks/XLR,bal.)to connect a signal source with line output level(e.g.mixer,CD/MP3 player)
- 13. Output LINE OUT(XLR,unbal.)

At this output, the signal of the input LINE IN(12) is available; either as a mono signal or only the signal of the right channel, can be selected by means of the selection switch(14).

- 14. Switch to select the operating mode
 - MONO = The speaker column reproduces the signal of the input LINE IN(12)monophonically; the monophonic input signal is available at the output LINE OUT(13).
 - RIGHT = The speaker column reproduces the left channel of the input LINE IN; the input signal of the right channel is available at the output LINE OUT.
- 15. Mono input COMBI IN(combined 6.35mm jack/XLR,bal.)to connect a microphone
- 16. Stereo input AUX IN(RCA jacks and 3.5mm jack,unbal.)to connect a signal source with line output level
- 17. Output MIX OUT(XLR,unbal.) to send the mixed mono signal to an additional amplifier, for example
- 18. Output REC OUT(RCA) to connect a recorder At this output, the mixed stereo signal is available.
- 19. Support for the mains fuse
 Always replace a blown fuse by one of the same type.
- 20. Mains jack for connection to a socket (220V-230V \sim 50Hz/60Hz) by means of the mains cable provided
- 21. Power switch



Installation Accessories(Optional)

1.Meline S2 BAG





Installation Reference

- 1. Place the subwoofer module on an even, horizontal surface (floor).
- 2. Start with the column module where a 6.35mm jack is located on the upper side. Place the column module-turned by approx.20 ° to the left-onto the connector of the subwoofer module and then turn it to the right stop so that it is firmly engaged.
- 3. Proceed in the same way to connect the second column module to the first one.

Reference






Specification


Frequency response(-3dB):	55Hz-20kHz				
Max.SPL:	113dB/119dB(PEAK)				
Dispersion(H × V):	90° × 40°				
Transducer:	2 × 6.5" Woofer,12 × 2.75" Midrange Unit				
	2 x 25mm Silk dome tweeter				
Power:	LF:160W, MF:120W, HF:20W				
Rated impedance:	4 Ohms				
Connector:	XLR for input, XLR for output				
Input:	Three channel (MIC/COMBI/LINE) balanced input(XLR and 6.35mm jack				
	One channel (AUX) unbalanced input(RCA and 3.5mm jack)				
Input impedance(line):	20kohm balanced input, 10kohm unbalanced input				
Input level:	LINE IN: 775mVrms, AUX IN: 200mVrms				
·	MIC IN: 20mVrms, COMBI IN: 40mVrms				
Input overloading level:	LINE IN : 4Vrms, AUX IN : 2Vrms				
, 3	MIC IN: 200mVrms,COMBI IN: 400mVrms				
Wire connection:	pin 1: ground; pin2: signal +; pin3: signal -				
Heat radiation:	Forced air-cooled drives				
Power cable:	PowerCon, three pins				
Safety voltage range:	AC 220V-240V~, 50/60Hz				
Amplifier power output:	800W				
Cabinet:	Plywood,column loudspeaker				
Handle:	1 x Wooden handles				
Painting:	Cabinet coated by Polyurethane paint; grille is powder coated				
Cabinet dimension (W \times D \times H):	250 x388 x1752mm(9.8 x15.3 x69.0in)				
Packing dimension $(W \times D \times H)$:	610 x350 x700mm(24.0 x13.8 x27.6in)				
Net weight:	21kg(46.2 lbs)				
Gross weight:	23kg(50.6 lbs)				
	<u> </u>				

Frequency response curve & THD curve

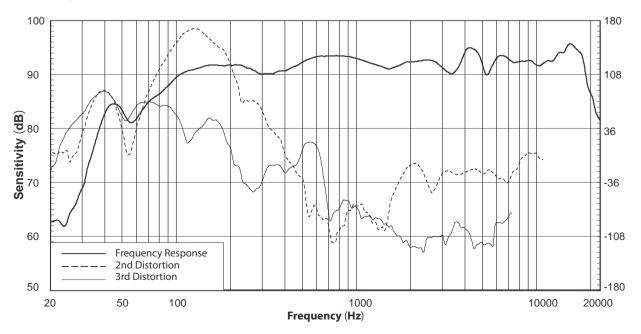



2D Dimension

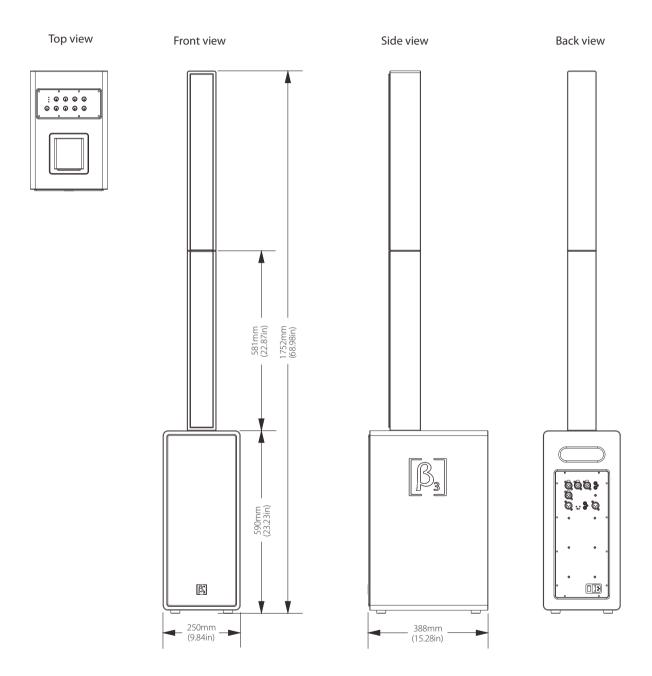

Notes:			

